




# Sequent Plug & Drive MY10 CNG



B R C G A S E Q U I P M E N T

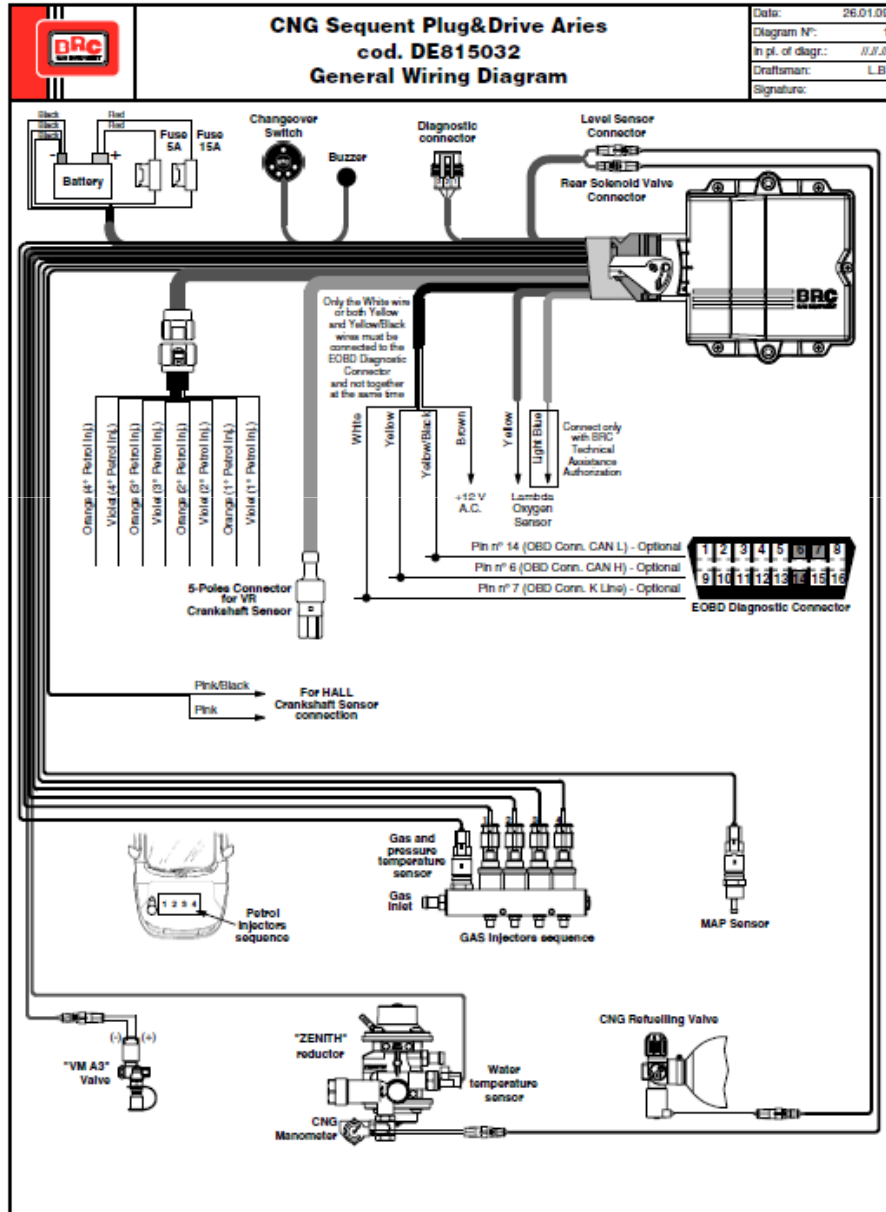

## CrankShaft Sensor Connection:

- Reading RPM Signal:

Grey

- Inductive Sensor (VR 4 Wires):

Pink, Blue

Pink/Black, Blue/Black

- Hall Effect (2 wires):

Pink

Pink/Black

CRANK CONFIGURATION : VR HIGH VOLTAGE

CAM SIGNAL : ONLY RPM  
VR HIGH VOLTAGE  
VR LOW VOLTAGE  
HALL




## **CRANKSHAFT POSITION SENSOR (CKP):**

Two Choice:


- Inductive Sensor (60-2, 36-2, 36-1, 30-2) :

This sensor has two wires (Positive and Negative), the signal displayed on the oscilloscope will be the following:

Positive Wire

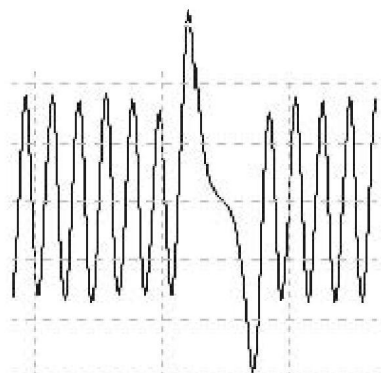

Negative Wire

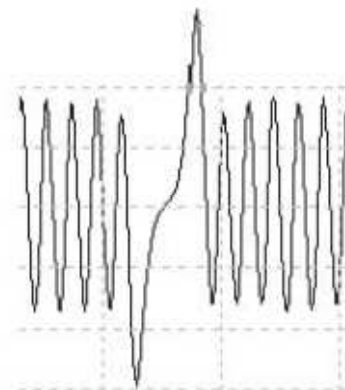



## ***CRANKSHAFT POSITION SENSOR (CKP):***

B R C G A S E Q U I P M E N T

- Hall Effect (60-2, 36-2, 36-1, 30-2)

This sensor has three wires (Positive, Negative and Signal) the signal displayed on the oscilloscope will be the following:

