


# LPG SEQUENT PLUG&DRIVE GENERAL WIRING DIAGRAM

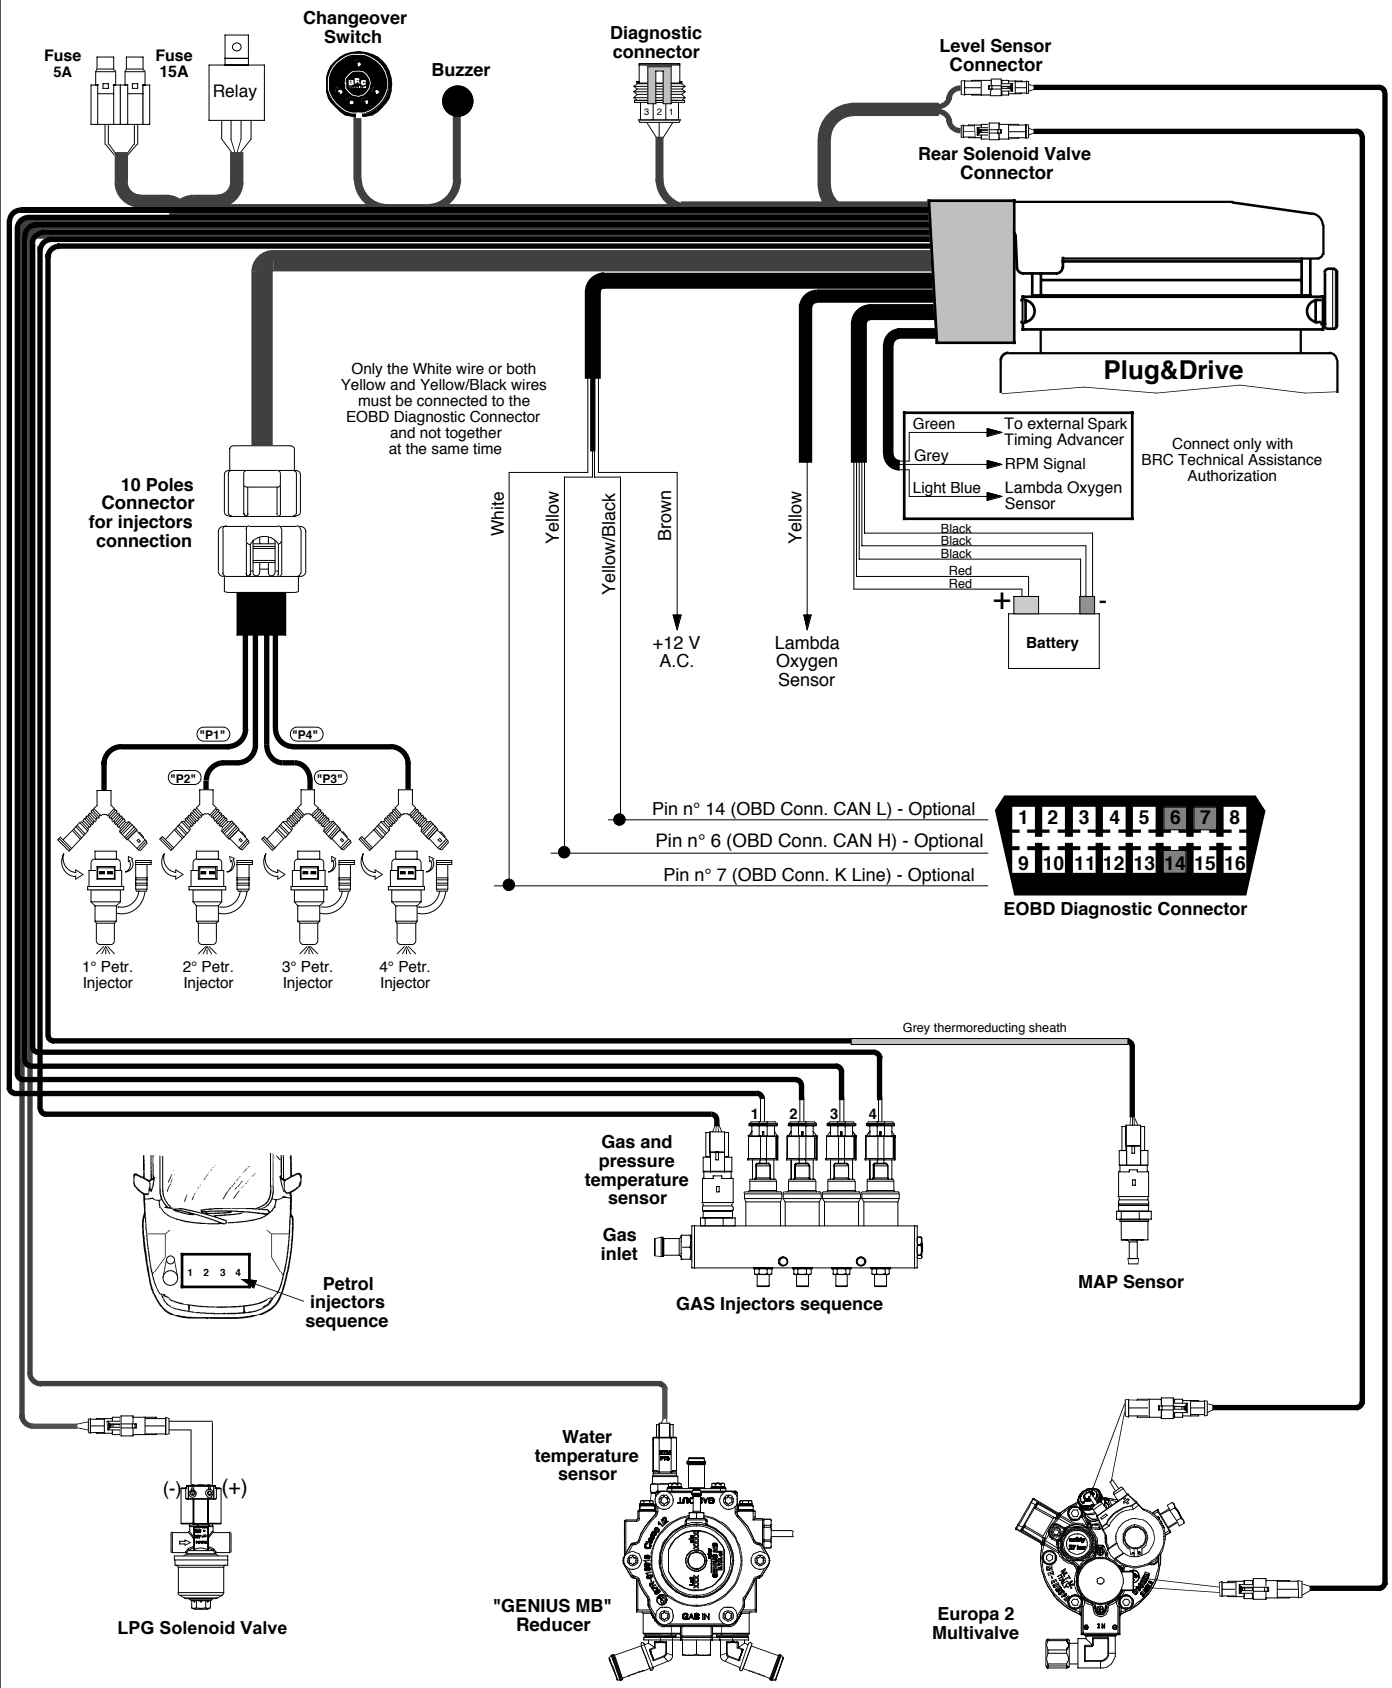

**CAUTION:**  
 Be careful with the cars for which the manufacturer prohibits or advises against disconnecting the battery, not to alter the anti-theft devices or automatic adaptivity - Never use welders connected to the battery of the same car - Connect with suitably insulated soft solderings - Position the BRC electrical devices in a well ventilated area, protected from water seepages and heat sources - We recommend to insulate the BRC electronic control unit wires which are not connected - BRC reserves the right to modify this diagram without notice - We also recommend you to be sure to have the last revision of the diagram drawn up by BRC.