



General wiring diagram Sequent Alba Plus Multipoint Electronic Injection


Date: 10_05_16

Diagram n°:

In place of diagram n°: //././.

Draftsman.: I.C.

Signature:

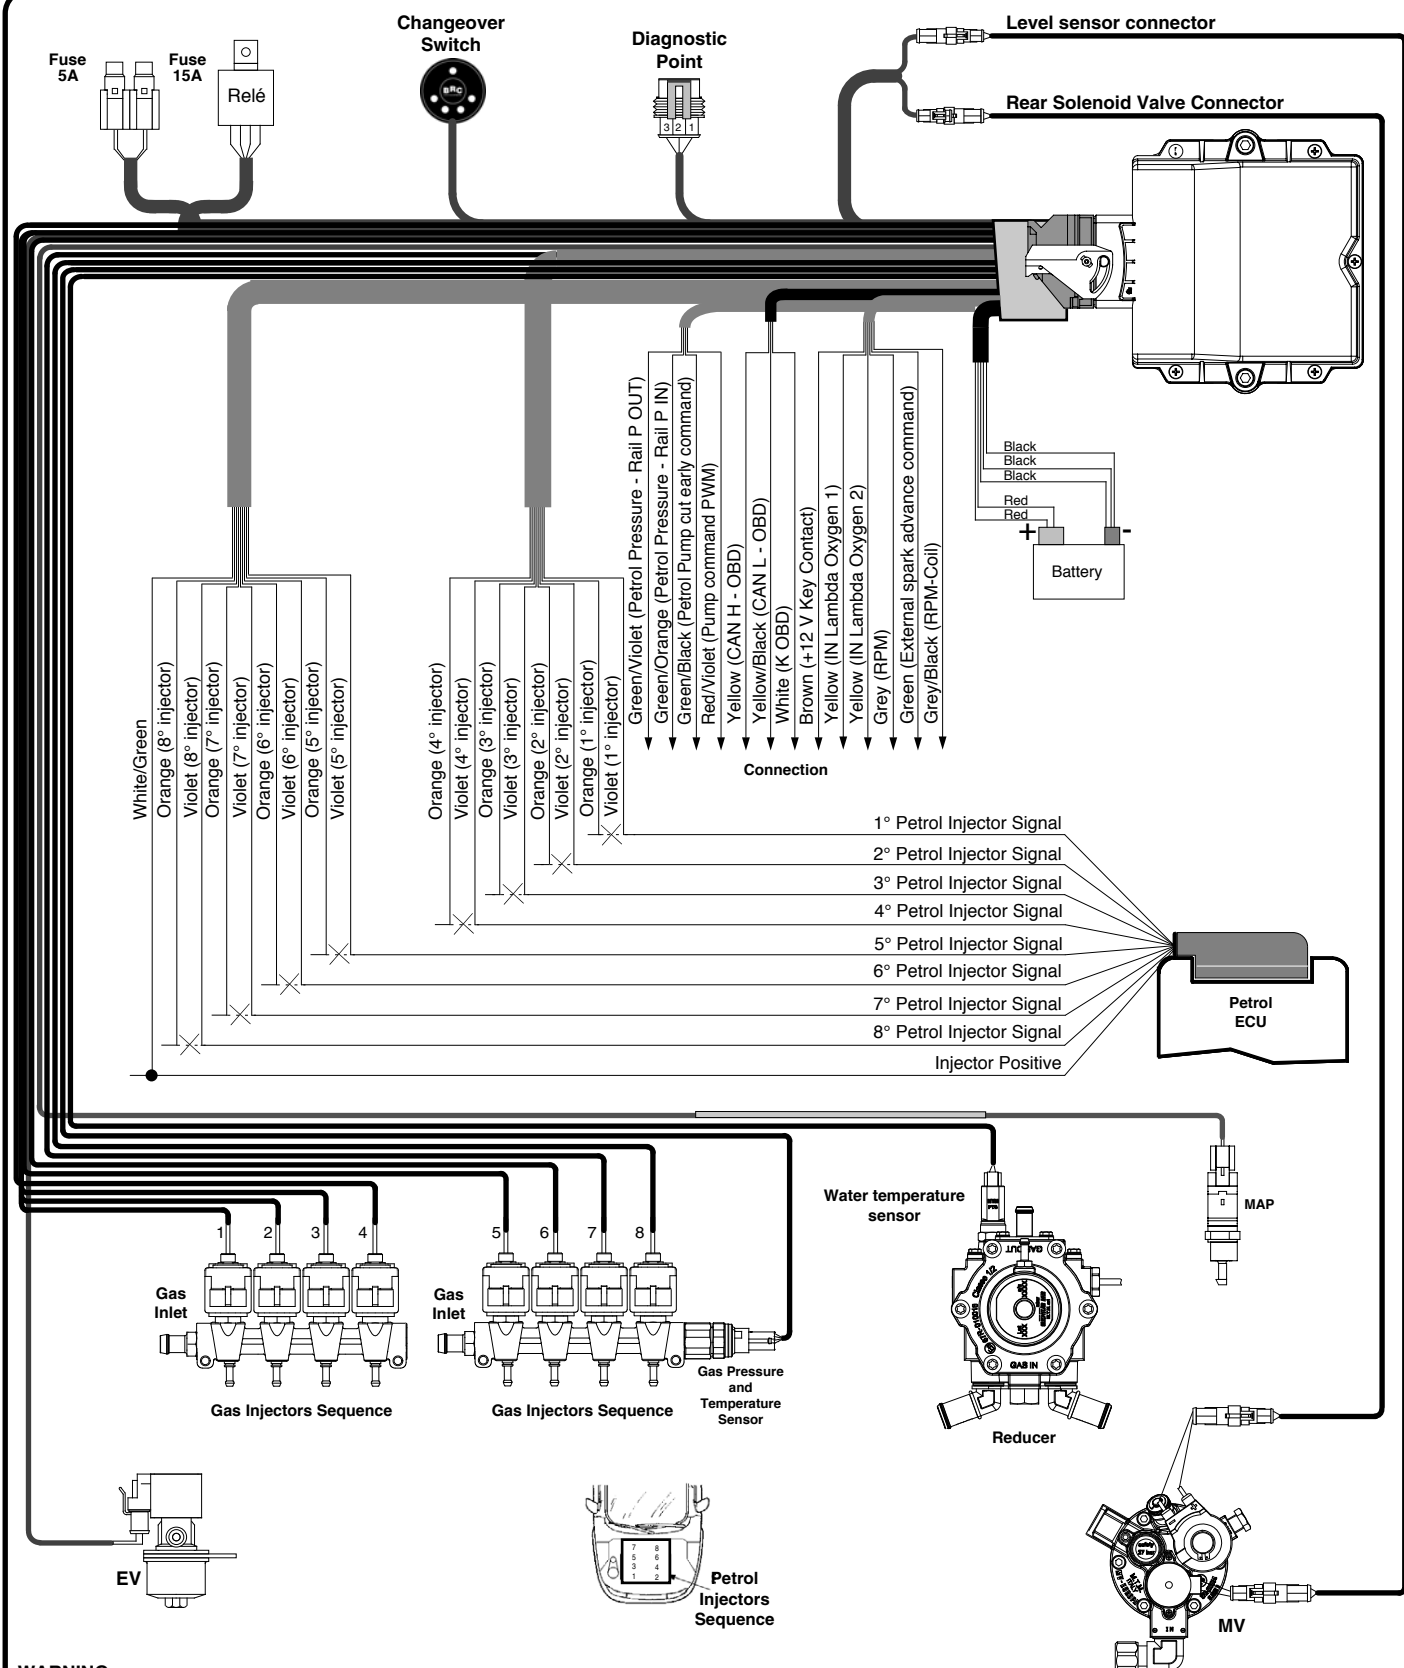

WARNING:

- Follow carefully petrol and gas injectors sequence as shown in the diagram.
- Never connect front and back Solenoid Valve cables to the Ground.
- In order to make a front and back Solenoid Valve right diagnostic, don't connect them to each other.
- Never replace fuses with another ones with bigger amperage.

NOTE:

- Follow injectors cut-off instruction

CAUTION:

Be careful with the cars for which the manufacturer prohibits or advises against disconnecting the battery, not to alter the anti-theft devices or automatic adaptivity - Never use welders connected to the battery of the same car - Connect with suitably insulated soft solderings - Position the BRC electrical devices in a well ventilated area, protected from water seepages and heat sources - We recommend to insulate the BRC electronic control unit wires which are not connected - BRC reserves the right to modify this diagram without notice - We also recommend you to be sure to have the last revision of the diagram drawn up by BRC.